



### What's in the Box

#### Thumb-rollers

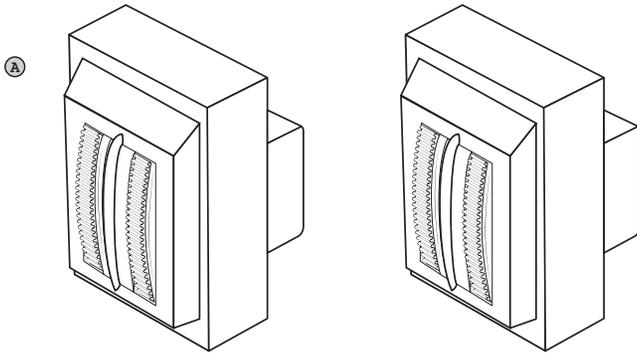


#### Hardware

Use these brackets for Thumb-roller installation instead of the brackets supplied with the Radio Motor.

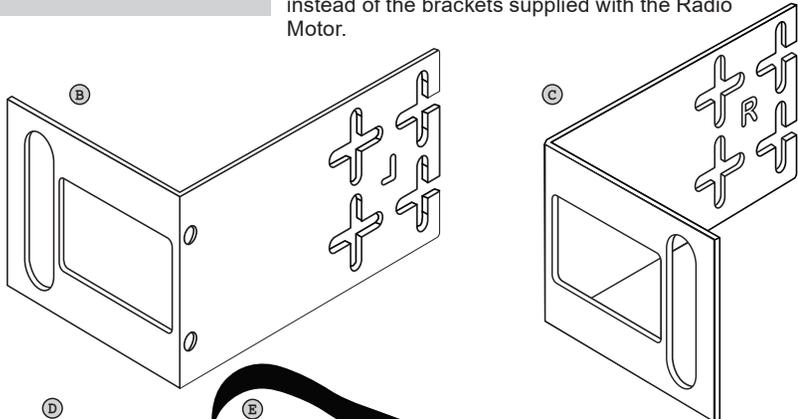

#### F Optional hardware

 

x(8)  
Included in your Radio Motor box

x(2)



x(2)

x(4)

x(2)


### Installation

**CONTINUE:** Instructions continued from the Radio Face Quick Start Guide.

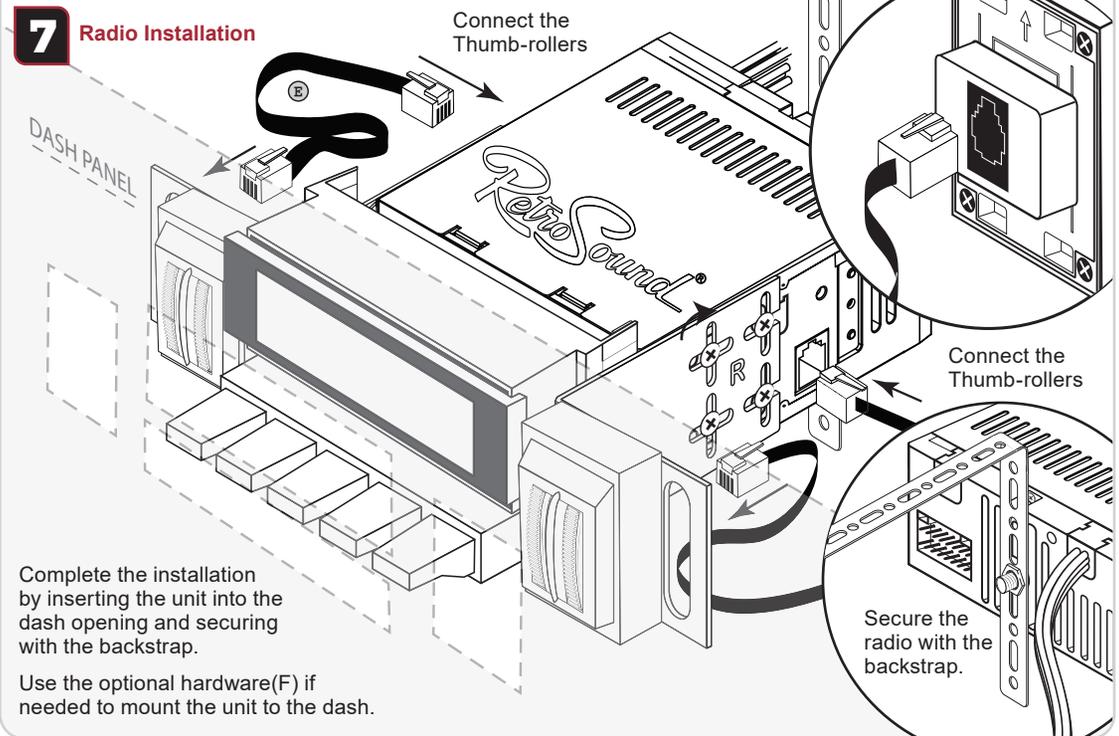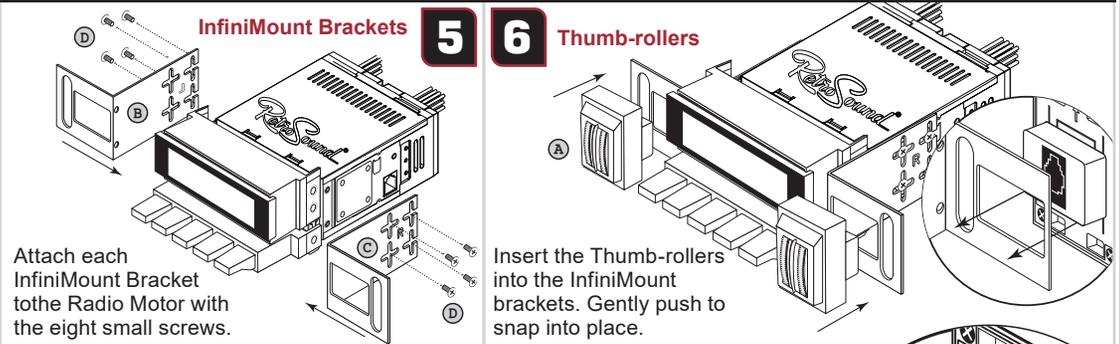

Refer to the user manual included in your motor box or on our website for more comprehensive instructions.

### Control Layout

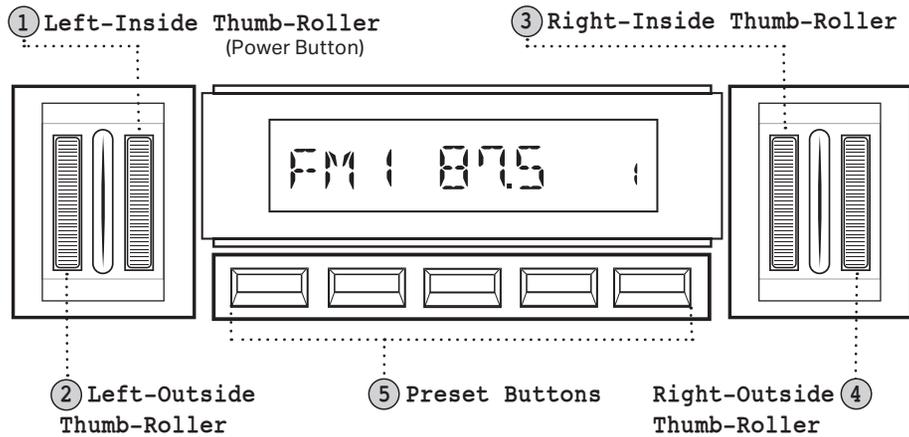

#### Control Setup

**IMPORTANT FIRST STEP: Setting the radio's control mode.**

1. Turn off the ignition and wait 30 seconds.
2. Turn the ignition on.
3. Once the radio displays "RETROSOUND" on the screen, press and hold the radio's Power Button(1) for approximately 15 seconds to reboot and enter SEL PANEL mode. The screen will display "SEL PANEL" when successful.
4. Release the Power Button(1).
5. Press and release the Power Button(1) repeatedly until Redondo is shown on the screen. The display type will flash five times and then the screen will turn off.
6. Press the Power Button(1) once more to turn the radio back on. The radio is now in the Redondo Panel/Display mode and is ready to use.

#### Radio Presets

##### Setting Radio Presets

To set a preset, tune to the station you want to set the preset to, and then press and hold the desired Preset Button(5) for two seconds.

##### Recalling Radio Presets

To recall a preset, simply press the Preset Button(5) your station was set to previously.

### Basic Operation

#### Power On/Off

- Press the Left-Inside Thumb-Roller(1) to power the unit on.
- Press and hold the Left-Inside Thumb-Roller(1) to power the unit off.

#### Volume

- Rotate the Left-Outside Thumb-Roller(2) up or down to change the volume.

#### Changing Source Modes

- Rotate the Left-Inside Thumb-Roller(1) down to cycle through the source modes.

#### Changing Radio Bands

- Rotate the Right-Inside Thumb-Roller(3) up to cycle through the radio bands.

#### Tune

- Rotate the Right-Outside Thumb-Roller(4) to scroll through the stations.

#### Mute On/Off

- Press the Right-Outside Thumb-Roller(4) to mute and unmute.

#### Equalizer (EQ)

- Press the Left-Outside Thumb-Roller(2) to enter the Tone Control sub-menu. Press and release the Left-Outside Thumb-Roller(2) until you see the EQ setting you'd like to adjust. Rotate the Left-Outside Thumb-Roller(2) up or down to adjust the setting. Press the Left-Outside Thumb-Roller(2) to move to the next item, and repeat to adjust each option. Let the unit time out to set.

#### Setting the Clock

- Press and hold the Right-Inside Thumb-Roller(3) to enter the System Settings sub-menu. Rotate the Right-Outside Thumb-Roller(4) to cycle through the choices until you see CLK, then press the Right-Outside Thumb-Roller(4) to select. Rotate the Right-Outside Thumb-Roller(4) up or down to adjust the hours. Then press the Right-Outside Thumb-Roller(4) again to move on to minutes. Rotate the Right-Outside Thumb-Roller(4) up or down to adjust the minutes. Let the unit time out to setup .

#### Display Color\*

- Press and hold the Right-Inside Thumb-Roller(3) to enter the System Settings sub-menu. Rotate the Right-Outside Thumb-Roller(4) to cycle through the choices until you see SCAN, then press the Right-Outside Thumb-Roller(4) to cycle through the colors. Let the unit time out to set.

#### Beep On/Off

- Press and hold the Right-Inside Thumb-Roller(3) to enter the System Settings sub-menu. Rotate the Right-Outside Thumb-Roller(4) to cycle through the choices until you see BEEP ON/OFF, then press the Right-Outside Thumb-Roller(4) to choose between BEEP ON or BEEP OFF. Let the unit time out to set.

\*Some features are not available on all radios.