

## USB Inputs

USB inputs (*Motor 2A, Motor 2DAB, and Motor 4HD only*) are located at the rear of the Radio Motor. The USB cables must be routed during installation to a convenient and accessible location for connecting USB devices.

**NOTE: The USB Mode will not appear in the menu unless a USB device is plugged in.**


## USB Device Connection

Connect your USB Flash Drive, iPod®/iPhone®, or other supported USB devices to one of the USB inputs. The radio will display USB1 or USB2 for three seconds indicating the device has been connected successfully. After connecting a USB device, the radio will display the USB icon **USB** on the screen and automatically find your songs and begin playback.

## USB Device Operation (*Apache users see page 23*)

The Preset Buttons(5) will enable you to play/pause, listen to 10 seconds of each song (*INTRO*), randomly shuffle all songs (*RDM*), and navigate folders.

### USB Playback

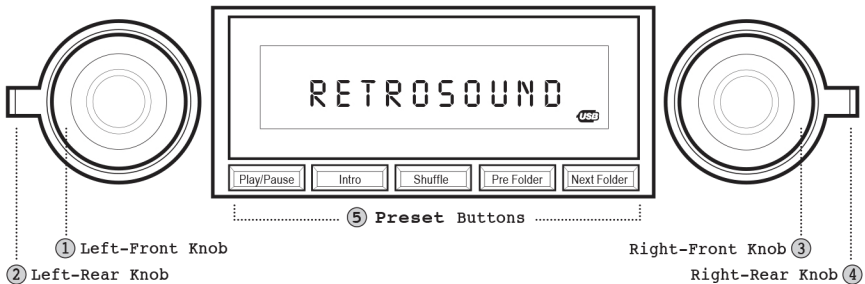

To play or pause a song, press the First Preset Button.

To activate/deactivate intro mode, press the Second Preset Button.

To activate/deactivate shuffle mode, press the Third Preset Button.

To navigate to the previous folder, press the Fourth Preset Button.

To navigate to the next folder, press the Fifth Preset Button.

To switch to the next song, rotate the Right-Front Knob(3) clockwise.

To switch to the previous song, rotate the Right-Front Knob(3) counterclockwise.

To activate/deactivate repeat, rotate the Right-Rear Knob(4) clockwise.