


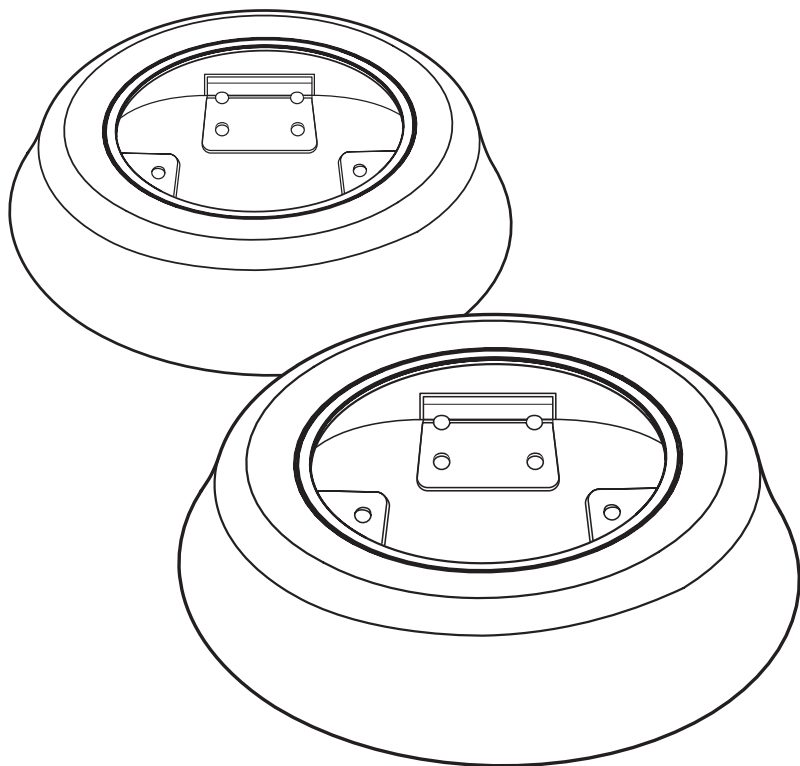

Installation Guide

The information enclosed in this installation guide is intended to provide a general outline to assist you during the process of installation. This guide does not cover every installation possibility, vehicle, or aspect of the installation process.


Retro Manufacturing, LLC, or its subsidiaries assume no responsibility for proper or improper installation. Every attempt has been made to make this installation guide as informative as possible. This guide may be updated from time to time, and specifications are subject to change without notice. Please check our website (www.retromanufacturing.com) for the latest updates.

Basic Installation Guidelines


Before You Begin

Always disconnect the battery before beginning. Avoid drilling through fuel lines, brake lines, hydraulic lines or electrical wiring. You will need the following mounting hardware (not included) and tools to install your RetroPod speaker modules. Always wear eye protection when using power tools.

Required tools & hardware (not included)

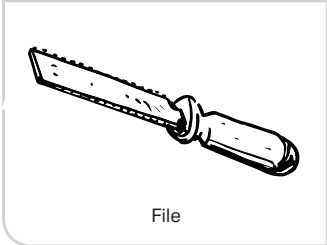

File

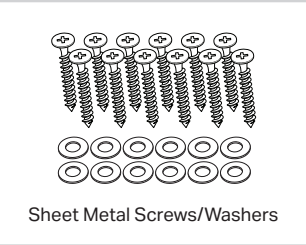

Sheet Metal Screws/Washers




OPTIONAL
Rotary Cutting Tool or Razor Knife


*Due to continuing product improvement, hardware, specifications and features are subject to change without notice.

Finding a Mounting Location for Your RetroPod® Speaker Modules


RetroPod allows you to mount speakers onto most surfaces in your vehicle where speakers normally cannot be installed. Below are some examples of common RetroPod installations.

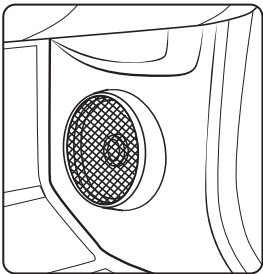

Kick Panel

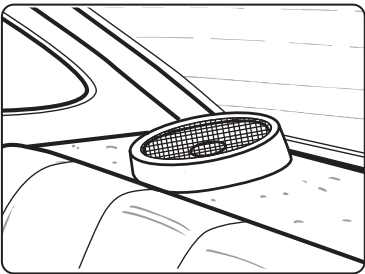

Package Tray

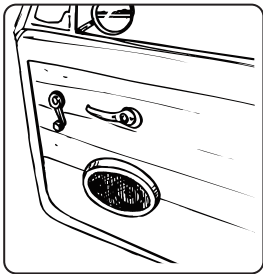



Door Panel

These illustrations are examples only. Your vehicle may have different mounting requirements.

Modifying Your RetroPod® Speaker Modules

Once you have selected a mounting location, you may need to modify the RetroPod® speaker opening to fit your speakers. The RetroPod 6A is designed for direct fitment with RetroSound S-62 speakers and requires no modification. When installing RetroSound R-652N speakers, use the pre-defined groove in the RetroPod as a cutting guide to enlarge the speaker opening.


Important: Use extreme caution before modifying your speaker modules. Once they have been modified, they will no longer be warranted and cannot be returned.

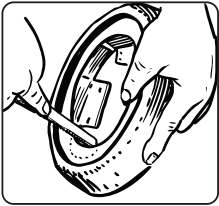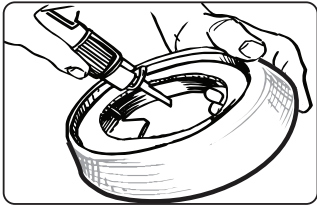


If needed, use a cutting tool to cut a hole to the size required for your speaker. Do not cut directly along the etched cutting grooves. Instead, allow some extra material to ensure a tight fit. Test fit the speaker, and use a file to trim and smooth the excess plastic to ensure the best fit.

Mounting Your RetroPod® Speaker Modules


Before mounting your speaker modules, make sure the area behind the mounting points are free of any electrical wires, fuel lines, brake lines, exhaust components or hoses.

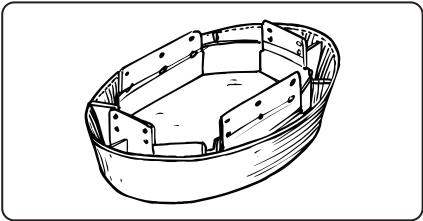


Start by folding all 4 mounting tabs inward towards the center to prepare your RetroPod for mounting.

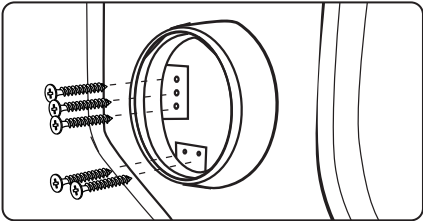


Before securing the RetroPod, make sure it is oriented so the angled speaker opening directs sound toward the listener. Use sheet metal screws and washers (not included) to secure the RetroPod® in the desired mounting location.

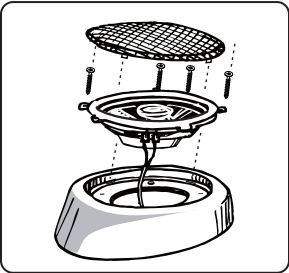

Route the speaker wires through the RetroPod and connect them to your speaker.

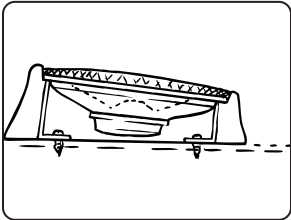

Then mount the speaker to the RetroPod using the screws supplied with your RetroSound speakers.

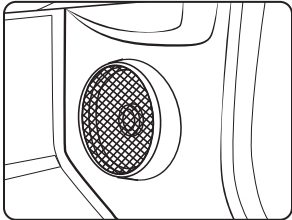

Finished installation (kick-panel shown)

Warranty

This warranty does not cover normal wear and tear or cosmetic damage. If your unmodified product does not work correctly because of defects in materials or workmanship, Retro Manufacturing, LLC (collectively referred to as the “warranter”) will repair or replace (at our option) the unit for one year from the date of original purchase as determined by the date on the sales receipt or other proof of purchase.

ITEM	WARRANTY
RetroPod® RPOD6A	One (1) Year

You may return your product anytime during the 1 year warranty period. This warranty only applies to products purchased and serviced in the continental United States. This warranty is extended only to the original purchaser of a new product which was not sold “as is.”

To handle a warranty issue go to www.retromanufacturing.com/returns-center and fill out the Returns Form to receive a Return Authorization (RA) number. All returns and warranty issues must be accompanied by a Return Authorization (RA) number along with a copy of your original purchase receipt. Any items sent to us without either an RA number or a copy of the receipt will be refused. Once an RA number is issued, send the product along with the original sales receipt to the address shown below.



7470 Commercial Way, Henderson, NV 89011
Phone: 888.325.1555 • Fax: 702.483.2229

Retro Manufacturing, LLC | Published: 10/05/2026