

262 KIT

INSTALLATION INSTRUCTIONS FOR:

CADILLAC

- 1999-2002 Cadillac Escalade

CHEVROLET


- 1996-2002 Chevrolet Astro
- 1995-1999 Chevrolet C/K Series Truck
- 1995-2002 Chevrolet Suburban
- 1999-2002 Chevrolet Silverado

GMC

- 1995-1999 GMC C/K Series Truck
- 1995-2002 GMC Suburban
- 1996-2002 GMC Safari
- 1996-2000 GMC Savanna
- 2000-2002 GMC Sierra Truck
- 2000-2002 GMC Yukon XL

Once the original radio is removed, attach the factory brackets to the Radio Face using a carriage bolt and nut on each side. If the factory brackets are damaged or not available, use the kit brackets shown below and the carriage bolts and nuts included with your radio face to fasten the brackets to the sides of the radio. You may need to use and modify additional parts included with your radio to complete the installation.

Make sure you test the fitment before installing.

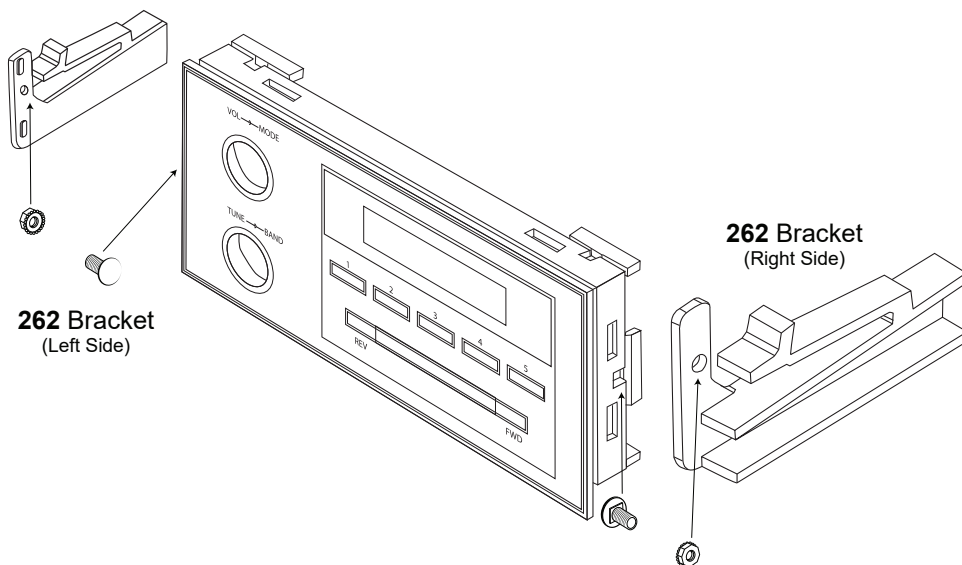

Wiring Codes

In your vehicle-specific kit, you'll find a wiring harness for your vehicle. This wiring harness plugs directly into your factory wiring harness. Listed below are the vehicle-specific color codes from your factory wiring harness. These are for reference only. Always make sure to test your wiring harness to ensure you are using the correct wires. If your vehicle is equipped with a factory Delco/Bose sound system, you will require a special adapter to install your radio if you wish to retain your factory amplified speaker system.

GENERAL MOTORS

POWER

Memory (+12 volt constant) = Orange
Ignition (+12 volt switched) = Yellow
Ground (-) = Black
Illumination = Gray
Dimmer = Brown
Power Antenna = Pink

SPEAKERS

Right Front (+) = Light Green
Right Front (-) = Dark Green
Left Front (+) = Tan
Left Front (-) = Gray
Right Rear (+) = Dark Blue
Right Rear (-) = Light Blue
Left Rear (+) = Brown
Left Rear (-) = Yellow