

Wiring Codes

In your vehicle-specific kit, you'll find a wiring harness for your vehicle. This wiring harness plugs directly into your factory wiring harness. Listed below are the vehicle-specific color codes from your factory wiring harness. These are for reference only. Always make sure to test your wiring harness to ensure you are using the correct wires. If your vehicle is equipped with a factory Delco/Bose sound system, you will require a special adapter to install your radio if you wish to retain your factory amplified speaker system.

GENERAL MOTORS

POWER

Memory (+12 volt constant) = Orange
Ignition (+12 volt switched) = Yellow
Ground (-) = Black
Illumination = Gray
Dimmer = Brown
Power Antenna = Pink

SPEAKERS

Right Front (+) = Light Green
Right Front (-) = Dark Green
Left Front (+) = Tan
Left Front (-) = Gray
Right Rear (+) = Dark Blue
Right Rear (-) = Light Blue
Left Rear (+) = Brown
Left Rear (-) = Yellow

264/269 KITS

BOTH THE 264 AND 269 BRACKETS CAN BE USED FOR THE FOLLOWING:

BUICK

- 1990-1995 Buick Riviera
- 1988-1996 Buick Century
- 1988-1994 Buick LeSabre
- 1988-1994 Buick Electra
- 1988-1990 Buick Electra Park Avenue
- 1988-1989 Buick Skyhawk
- 1987-1995 Buick Skylark
- 1984-1994 Buick Electra Estate Wagon
- 1984-1987 Buick Electra
- 1984-1987 Buick LeSabre
- 1984-1987 Buick Regal
- 1983-1985 Buick Riviera
- 1983-1985 Buick Skylark
- 1982-1987 Buick Skyhawk
- 1982-1987 Buick Century
- 1984-1987 Buick Park Avenue

CADILLAC

- 1988-1995 Cadillac DeVille
- 1988-1991 Cadillac Seville
- 1988-1991 Cadillac Eldorado
- 1985-1993 Cadillac Fleetwood
- 1985-1987 Cadillac DeVille
- 1984-1987 Cadillac Eldorado
- 1984-1987 Cadillac Seville

CHEVROLET

- 1984-1989 Chevrolet Corvette
- 1988-1989 Chevrolet S-10 Pickup
- 1988-1989 Chevrolet S-10 Blazer
- 1985-1988 Chevrolet Nova
- 1986-1987 Chevrolet S-10 Blazer
- 1986-1987 Chevrolet S-10 Pickup

CHEVROLET (CONTINUED)

- 1985-1988 Chevrolet El Camino
- 1985-1988 Chevrolet Monte Carlo
- 1982-1992 Chevrolet Camaro
- 1988-1995 Chevrolet Van
- 1990-1994 Chevrolet S-10 Pickup
- 1990-1994 Chevrolet S-10 Blazer
- 1989-1991 Chevrolet K5 Blazer
- 1985 Chevrolet Citation
- 1984-1987 Chevrolet Celebrity

GMC

- 1990-1995 GMC Safari

OLDSMOBILE

- 1982-1985 Oldsmobile Toronado
- 1983-1984 Oldsmobile Omega
- 1991-1994 Oldsmobile Bravada
- 1992-1995 Oldsmobile Achieva
- 1984-1990 Oldsmobile 98
- 1986-1988 Oldsmobile Delta 88
- 1984-1989 Oldsmobile Cutlass Calais
- 1984-1988 Oldsmobile Cutlass Supreme
- 1982-1987 Oldsmobile Cutlass Ciera

PONTIAC

- 1988-1992 Pontiac Firebird
- 1988-1992 Pontiac Trans Am
- 1982-1987 Pontiac Trans Am
- 1982-1987 Pontiac Firebird
- 1982-1991 Pontiac Bonneville
- 1985-1987 Pontiac Grand Am
- 1984-1988 Pontiac Fiero
- 1985-1987 Cadillac Fleetwood
- 1989-1991 Chevrolet Suburban

ONLY USE THE 264 FOR THE FOLLOWING MODELS:

CHEVROLET

- 1990-1995 Chevrolet Astro Van

GMC

- 1989-1991 GMC Suburban
- 1988-1989 GMC S15 Pickup
- 1988-1989 GMC S15 Jimmy
- 1986-1987 GMC S15 Pickup
- 1986-1987 GMC S15 Jimmy
- 1988-1995 GMC Van Fullsize
- 1990-1994 GMC S15 Jimmy
- 1990-1993 GMC S15 Pickup
- 1989-1991 GMC Jimmy

OLDSMOBILE

- 1990-1996 Oldsmobile Silhouette
- 1990-1991 Oldsmobile Cutlass Calais
- 1988-1996 Oldsmobile Cutlass Ciera
- 1982-1989 Oldsmobile Firenza

PONTIAC

- 1988-1995 Pontiac Grand Am
- 1985-1987 Pontiac Grand Prix




General Installation

Once the original radio is removed, attach the factory brackets to the Radio Face using a carriage bolt and nut on each side. If the factory brackets are damaged or not available, use the kit brackets shown below and the carriage bolts and nuts included with your Radio Face to fasten the brackets to the sides of the radio. You may need to use and modify additional parts included with your radio to complete the installation.

Make sure you test the fitment before installing.

Only attach the brackets required for the specific installation. Cut and remove any unused tabs that interfere with the installation.

264 BRACKET *See cover for applicable models*

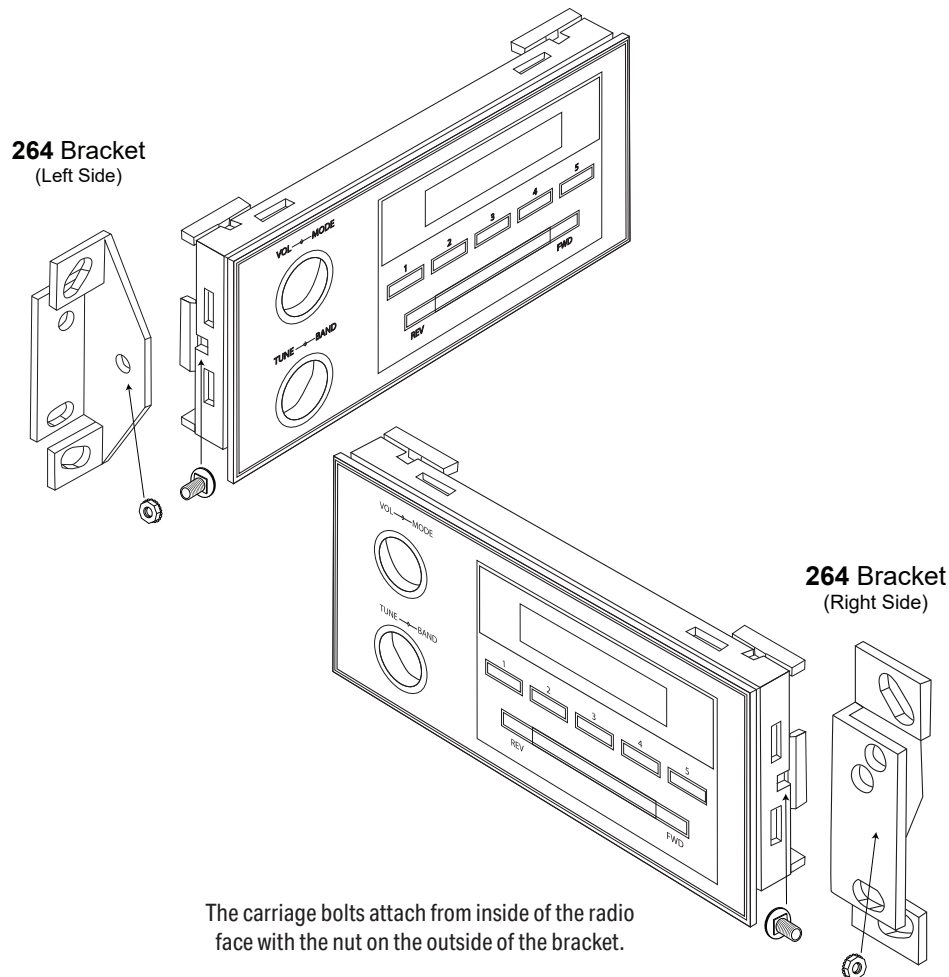

269 BRACKET *See cover for applicable models*

